



ASSEMBLY INSTRUCTIONS

AL-51326A, AL-51326C, AL-56864A & AL-56864C PORTABLE GARMENT RACKS



TOOLS REQUIRED: Two - 7/16" open end (or box end) wrenches; pliers. We recommend that two people work together to assemble the portable garment racks.

Place bottom crossbar of one upright under end of wheelbase. Attach with three bolts and nuts through top holes and two through side holes. Repeat for other upright.

MODEL 51326A/56864A: With crossbar resting (and centered) on top of uprights, align the three holes on top and attach with three bolts and nuts at each end. Then secure crossbar with two bolts and nuts through two center holes at each end.

MODEL 51326C/56864C: Position one crossbar with mounting plate pointing down and triangle plate facing out. Align with two holes in vertical section of upright and attach using two bolts and nuts on each end. Repeat for other crossbar. Be sure all bolts and nuts are securely tightened.

Cover Frame Installation for Both Single and Double Pole Garment Racks

- 1) Attach one side support of cover frame through the outside holes in the top of the garment rack legs.
- 2) Slide the center cover support into each end of the side support attached in step one.
- 3) Slide the other side support over the center piece and attach as in step one.

WARNING

- Never allow children (or adults) to ride on or swing from garment rack.
- Keep casters free of thread, lint, hair and other debris. Be sure casters roll free and turn easily at all times. If a caster does not roll properly, remove garment rack from service immediately.
- Periodically check all bolts and nuts to insure they remain tight.
- Weight limit 175 lbs. - Do not overload!
- Be sure all loads are evenly balanced at all times. Overloading or unbalanced loads may cause tipping, resulting in serious injury.
- Always proceed slowly and use extra caution when turning corners.

6851 High Grove Blvd., Burr Ridge, IL 60527
800-323-4282 • Fax 800-950-1167

E-mail: info@alcosales.com www.alcosales.com