



AL-75631 Instructions

This remote is preprogrammed to operate the following brands without setup:

LG, Samsung, RCA, Philips, Vizio, Hisense, Panasonic, and Zenith TVs

Simply insert batteries and you're done.

Note: Reprogramming the remote will make it operate only the brand you reprogrammed it for.

Reprogramming your Remote:

1. Manually turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on, now release the button.
3. Enter the 3-digit code from the code table. After entering the code, the indicator light will turn off, indicating completion.

Note: If the LED blinks rapidly after entering the code, you may have entered an invalid code. Double-check the code list and try again. If volume and channel functions don't work, try another code.

Important: If your TV code is not listed or the TV doesn't respond, try using code search:

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on, then release the button.
3. Press the channel up button slowly and repeatedly (can take 60 or more times) until the channel changes.
4. Press ENTER to lock in the code.

Note: If you pass the code, press the CH- key to go backward through the library until the TV changes channels again, then press ENTER to lock in the code. You can identify the code for future use with the following step.

Code Identification:

1. Turn on the TV.
2. Press and hold the SET-UP key until the LED blinks and stays on.
3. Press the SET-UP key again and release.
4. Slowly press each number key from 0 to 9. When the LED blinks, that is the first digit of your code. Repeat step 4 to find the next digit and repeat once more for the third digit.

To return the Remote to Factory Setting:

1. Press and hold SETUP until the LED stays on.
2. Press CC.

New feature for digital channels that use ● or —	See next page for all codes:
LG.....710	ONN.....727
Samsung.....711	Sceptre.....732
RCA.....717, 718, 719, 720, 710	TCL.....723,724
Philips.....712, 721, 722	Toshiba.....728
Element.....731	Vizio.....726
Hisense.....725	Westinghouse.....730,731
Insignia.....729	

Advent.....	911, 932, 933, 614, 303, 201, 301, 909, 919, 920, 934, 082, 109	MTC.....	903, 601, 617, 619, 103
Aiko.....	900	Multitech.....	901
Akai.....	601, 903, 922, 027, 038, 039, 041, 117	NAD.....	609, 607, 603
AOC.....	079, 601, 617, 103, 076, 077, 078, 080, 156	NEC.....	601, 617, 619
AOMNI.....	161	Nikko.....	601, 607, 900
Apex.....	000, 618, 604, 140, 155	Norcent.....	078, 079
Ascoli.....	237	Noshi.....	800
Aspect.....	606	NTC.....	900
Audiovox.....	100, 901, 900, 101, 015, 016, 133	Olevia.....	923, 023, 024, 025, 026, 228
Belcor.....	617	ONN.....	400
Bell&Howell.....	620, 611	Onwa.....	901
Blue Diamond.....	407	Optimus.....	620, 004, 603
Bradford.....	901	Optonica.....	500, 610
Brockwood.....	617	Orion.....	902, 614, 615, 109
Broksonic.....	902, 614	Panasonic.....	004, 202, 802, 610, 301, 302, 303, 055, 056
Candle.....	601, 619	PDI.....	007, 008, 009, 010, Bed Code A 713, B 714, C 715, D 716
Celebrity.....	605	Philco.....	301, 614, 601, 606, 617
Celera.....	092, 094	Philips.....	301, 302, 303, 305, 601, 615, 617, 803, 078, 905, 906, 907, 908, 909, 011, 034, 035, 036, 037, 040, 046, 047, 048, 080
Changhong.....	618	Pilot.....	601, 617
Citizen.....	903, 601, 619, 900, 614	Pioneer.....	603, 600
Clairtone.....	103	Polaroid.....	400, 910, 913, 915, 229, 917, 920, 012, 013, 028, 029, 030, 031, 032, 033, 041, 083, 084, 109, 113, 117, 128
Coby.....	135, 136, 151	Portland.....	617, 900
Concerto.....	619	Prima.....	085
Contex.....	901, 103, 234	Prism.....	202
Craig.....	901	Proscan.....	400, 074, 085, 112, 127, 234, 233, 235, 168, 169, 170, 171, 172, 173, 174, 175, 232, 231, 230, 930
Crosley.....	303, 301	Proton.....	607, 102
Crown.....	901	Proview.....	112, 113, 114, 115, 116
Curtis/Curtis Mathes.....	400, 301, 620, 100, 500, 232, 231, 903, 044, 621, 606, 619, 611, 603, 102, 153, 127, 168, 169, 170, 171, 172, 173, 174, 175, 930	Pulsar.....	700, 617
CXC.....	901	Quasar.....	004, 202, 610, 802
Daewoo.....	100, 617, 900, 101	RadioShack.....	400, 620, 610, 901, 621, 607, 617, 619
Daytron.....	617	Realistic.....	620, 610, 901, 601, 607, 617, 619
Dumont.....	700, 617	RCA.....	400, 112, 237, 074, 158, 230, 617, 800, 280, 296, 232, 231, 234, 612, 299, 281, 297, 501, 298, 619, 127, 600, 402, 403, 401, 404, 405, 623, 042, 406, 168, 169, 170, 171, 172, 173, 174, 175, 930, 609
Durabrand.....	902, 901, 201, 614, 615, 914, 918	Rhapsody.....	103
Dynex.....	614, 085, 086, 109, 110, 112, 620, 903, 619, 910	Roomconx.....	614, 615, 902, 924
Electric Mirror.....	225	Roku.....	084 (Roku TV only – not for Roku stick or player)
Electroband.....	605, 103	Runco.....	700, 601
Electrohome.....	614	Sampo.....	601
Element.....	112, 160, 113, 114, 115, 116, 152	Samsung.....	930, 903, 601, 607, 617, 619
Emerson.....	620, 902, 022, 614, 901, 200, 201, 607, 617, 615, 602, 103, 101, 930, 903, 112	Sansui.....	614, 902, 615, 109, 234, 235, 233
Envision.....	079, 601, 076, 077, 078, 080	Sanyo.....	620, 801, 931
ESA.....	901, 201, 601, 903	Sceptre.....	605
Fisher.....	620, 801	Scotch.....	607
Fujitsu.....	615, 300	Scott.....	902, 901, 607, 617, 615
Funai.....	901, 615, 022, 201	Sears.....	400, 301, 620, 609, 607, 615, 622, 801, 201, 402
Futurtec.....	901	Seiki.....	112, 113, 114, 115, 116, 160, 152
GE.....	400, 202, 100, 200, 607, 608, 802, 042	Sharp.....	500, 610, 501, 929
GFM.....	201, 022, 133	Sharp (LCD).....	912, 929, 156
Gibraltar.....	700, 601, 617	Shogun.....	617
Global Vue.....	125, 126	Signature.....	611
GoldStar.....	601, 607, 617, 619	Simpson.....	803
Grundy.....	901, 615	Sony.....	605
Haier.....	914, 918, 043, 045, 092, 093, 094, 095, 096, 097, 130, 131, 127, 122, 626	Soundesign.....	901, 607, 615
Hallmark.....	607	Soyo.....	061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073
Hannspree.....	080, 627	Squareview.....	201
Harvard.....	901	SSS.....	901, 617
HCI.....	020 (bed 1), 021 (bed 2)	Starlite.....	901
Hisense.....	112, 614, 902, 138	Superscan.....	201, 500, 912, 929
Hitachi.....	606, 619, 611, 005, 238, 916, 060, 150	Supersonic.....	234
HP.....	075	Supreme.....	605
ILO.....	921, 925, 609, 201, 059	Sylvania.....	301, 601, 022, 201, 901
Infinity.....	301	Symphonic.....	901, 201, 022
Infocus.....	400	Syntax.....	023, 024, 025, 026
Inteq.....	700	Tandy.....	500
Insignia.....	084, 614, 112, 303, 201, 301, 909, 919, 920, 934, 081, 082, 083, 085, 086, 108, 109, 110, 111, 117, 620, 903, 619, 910, 930	Tatung.....	802
Iris.....	250	TCL (non-Roku).....	400
JBL.....	301, 000, 604, 618	Technics.....	004, 202
JCB.....	605	Techwood.....	202, 619
JC Penny.....	400, 609, 202, 903, 601, 607, 608, 617, 800	Teknika.....	301, 901, 104, 605, 617, 615, 619, 611, 900
JVC.....	701, 159, 157, 226	TMK.....	607, 619, 602
KEC.....	901	Toshiba.....	609, 903, 613, 910, 619, 058, 620
Kenwood.....	601, 617	Trutech.....	101, 201, 617, 900, 015, 016, 017
KLH.....	618	Upstar.....	176, 177
KTV.....	901, 601, 103	Venturer.....	015, 016, 133
Kolin.....	023, 024, 025, 026	Vertex.....	236
Konka.....	904, 001, 304, 002, 003, 041, 083, 117	Victor.....	701
LG.....	619, 227, 910, 700	Vidtech.....	607, 617
Logik.....	611	Viewsonic.....	087, 088, 089, 090, 091, 098, 099, 105, 106, 107, 019, 132
Luxman.....	619	Viore.....	903, 119, 120, 121, 122, 123, 124, 626, 154, 127
LXI.....	400, 301, 620, 609, 607	Vivitek.....	058
Magnavox.....	301, 302, 303, 601, 615, 617, 803, 078, 905, 906, 907, 908, 199, 034, 909, 011, 035, 036, 037, 040, 046, 047, 048	Vizio.....	927, 011, 013, 014, 626
Majestic.....	611	Wansa.....	237
Marantz.....	301, 601	Wards.....	301, 610, 601, 607, 608, 617, 615, 619, 611
Matsushita.....	004	Westinghouse.....	926, 928, 049, 050, 051, 052, 053, 054, 624, 625, 626, 127, 129, 152
Megatron.....	607, 606	White Westinghouse.....	614, 101, 605
MEI.....	103	Yamaha.....	601, 617
Memorex.....	118, 620, 004, 614, 104, 095, 607, 615, 611, 700, 303, 201, 301, 909, 919, 920, 934, 012	X2-GEN.....	057
MGA.....	104, 601, 607, 617, 500	Zenith.....	700, 614, 611, 900, 619, 910, 215, 216
Midland.....	400, 700, 202		
Minutz.....	608		
Misakai.....	201		
Mitsubishi.....	500, 104, 607, 617, 601		
Motorola.....	500, 802		