


AL-79297

Reservoir Seals Instruction Sheet

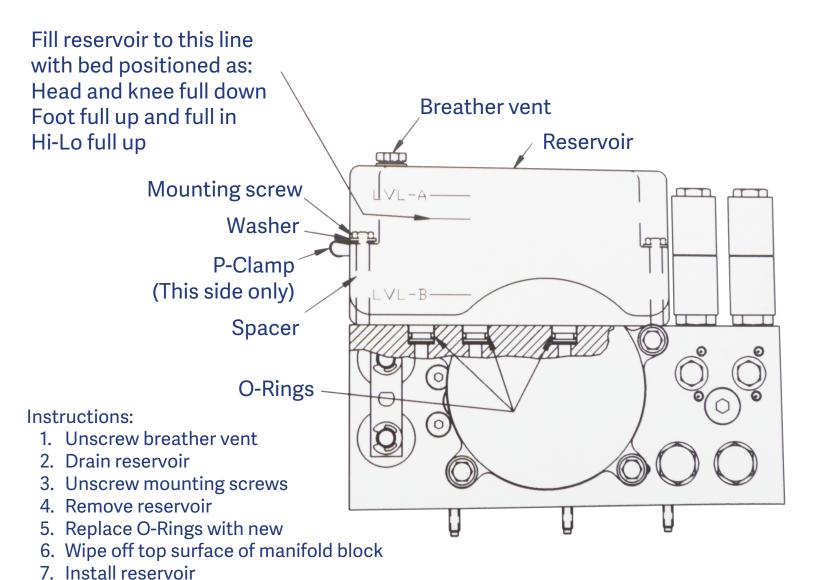

800.323.4282

10. Install breather vent

8. Install mounting screws (note P-Clamp) (Torque to 5 Ft-Lbs)9. Refill reservoir with hydraulic oil - Mobil AW32 - to shown level

www.alcosales.com