

**WARRANTY
REGISTRATION**
Register online today for a
chance to win a FREE Trip Lite
product. www.trip-lite.com/warranty



Instruction Sheet

AL-84146 Replacement Battery Pack


ALCO[®]
Sales & Service Co.

Battery Replacement

Under normal conditions, the original battery in your UPS will last several years. Battery replacement should be performed only by qualified service personnel. Refer to "Battery Warnings" in the Safety section.


1 Carefully pull the front panel away from the UPS.

Place front panel on top of the unit.

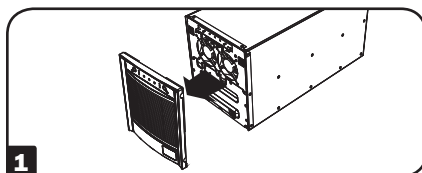


2 Remove battery cover.

Disconnect the wiring harness connecting the batteries to the unit. Use a screwdriver to remove the screws holding the battery cover to the unit and carefully remove the cover.

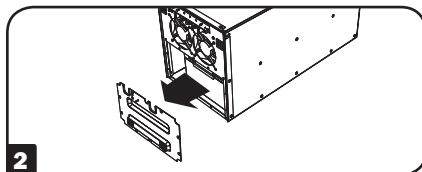


3 Remove old battery pack.

Carefully pull the batteries from the UPS by using the pull tab.

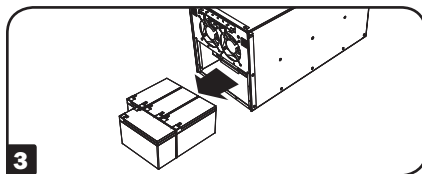

4 Connect new batteries.

Carefully push the new battery pack back into the UPS.

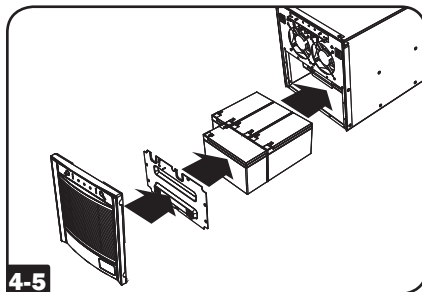

5 Reassemble UPS.

Reinstall the battery cover, connect the battery wires to the UPS and install the front panel.

Note on Labeling

Two symbols are used on the label.
V~ : AC Voltage V== : DC Voltage

