



# Stick-and-Stand™ Mats

AL-85876

## INSTALLATION INSTRUCTIONS

1. The floor must be clean and dry.
2. Measure your desired distance between mats.
3. Position the mat in the desired location, then press and smooth the mat into place.



## CLEANING AND MAINTENANCE

**Please do not pick up the mat to clean the floor underneath until you are ready to replace it.**

Stick-and-Stand mats feature a low profile and can be left in place during daily floor cleaning activities. Floor scrubbers, vacuums, brooms, and mops will pass right over it without causing damage to the mat. Standard floor scrubbers may be used to clean the mat. Use low settings for water and pressure, but note that extended use of floor scrubbers could result in removal of the printed design.

Stick-and-Stand mats are designed to dissipate water and dry quickly, however, standard fans and floor blowers can be used to expedite drying. For extremely wet conditions, use a wet vacuum or extractor to remove excess water.

Stick-and-Stand mats are designed to last up to 3-4 months under normal conditions. If the mats are installed in a high-traffic area or shows signs of wear or a weakened bond to the floor prior to its intended life, it should be replaced.