

Replacing Bushings & Roller Bearings In Pneumatic and No Flat Wheels

Models manufactured between 2000 and 2008 used a 20mm axle. After 2008 all 8" and 10" wheels use a 19mm axle. If your replacement wheel is tight and doesn't turn freely do the following: Using a wrench handle or rounded rod, pop the bushings out of the old wheel and new wheel as shown (its easy). Press the old bushings into the new wheel hub and install wheel on axle. The wheel should now turn easily on the axle.



AL-87198-10



AL-87198-08