

# INSTRUCTIONS FOR AL-93320

## Battery Installation:

1. To open cover: **With keypad facing you**, first slide dark lens cover away from you (photo A, step 1) and then lift lid upward from the back (photo A, step 2)
2. When placing **two AAA batteries** in the compartment note the + and - symbols on the metal hinge should make contact with the corresponding + and - end of each battery (photo B).
3. Closing cover: **With keypad facing away from you** gently close cover by pressing downward (photo C, step 1) and sliding it toward the front (keypad) until it is aligned. (photo C, step 2)
4. Test remote by pressing the power button; the LED should light, indicating that the batteries are in correctly. If the LED doesn't light, then the batteries are either in wrong or the batteries are bad.



Photo A  
Open with **keypad facing you**



Photo B



Photo C  
Close with **keypad facing away from you**

Optional screw for  
the battery  
compartment is in  
bag with remote

Important  
Multi-Bed Setup See Page 3

**No Setup required for ANY Samsung or LG TV. Also works RCA (commercial TVs) with no setup.**

## FOR ALL OTHER TV BRANDS SEE EASY TV SETUP INSTRUCTIONS BELOW

1. Turn ON the TV and then **stand back about 5 feet from TV and point the remote at the CENTER of the front panel of the TV.** It will not be necessary to point the remote at that exact area once the remote is set-up.
2. **Press and firmly Hold down the SETUP button**, do not release. The LED will blink once and then after 7 seconds it will start code search. The LED will continue to blink every 2 seconds. **Once your TV shuts OFF immediately remove your finger from the SETUP button**; the code automatically locks in.
3. Testing the remote:
  - **For TV Only:** Test Power, Volume and Channel Functions, **if all work correctly setup is complete.** If not, you may not have an exact code match. Start again at step #1. The code search will continue where it left off.
  - **For TV Plus Cable Box:** Only test Power and Volume function, **DO NOT CHANGE CHANNELS.** If these functions operate correctly please turn page over and **see Page 2.**

**Important Note: If you think you missed the TV code or you intend to use the remote on a different brand TV: Reset the remote back to the beginning of the code search:** Press and hold the SETUP button down, then press and hold the CC button down at the same time until the red LED light blinks quickly 3 times, then release both buttons. You have now reset the code list back to the beginning. Now repeat step 1-3 from the Easy TV Setup above.

# CABLE BOX SETUP

Important  
Multi-Bed Setup See Page 3



**You must first complete TV setup before proceeding. (See Page 1)**

- 1) **With the cable box ON**, Press and Hold Down both the SETUP and ENTER buttons at the same time, until the LED light turns on and remains ON.
- 2) Enter the three digit direct access number for your brand from the list below; the LED light will then turn off confirming it was accepted.

Now test the remote: Point the remote toward the Cable Box and TV and try the CH+ and CH- buttons as well as the the channel numbers. If the channels change correctly, make sure VOL+ , VOL- and TV power (ON and OFF work. If they do, you are done. If not, repeat these steps with all the access numbers listed for your brand before trying the numbers listed as "Other".

*Hint: If your Cable Provider is not listed, please search by the manufacturer of your cable box.*


**Note:** If your cable box has a power button, use the CBL button on Clean Remote to power it on or off.

Comcast / Mediacom / Xfinity	300				Cisco / Scientific Atlantic	347	302	300	
					Guest-Tek	334	352		
COX / Evolution / Midcontinent (MIDCO)	325	305	356		nStream	327			
BrightHouse / Spectrum / Charter / Time Warner / Premier	302	305			Echostar / Hughes / Humax / Samsung	335	337		
Cable One	323				NXTV	338			
Amino	324	340	345	346	Exterity	348			
Verizon / Frontier	301				Entone	350	346		
Pace	337	345	301	302	Roomlinx	351			
Aceso	330				Digitech	331			
ADB / Arris / Motorola	345	346	301	300	Innvue	332			
					PBTV	328			
					Moviebeam	326	353		
<b>Other:</b>	303	304	306	307	308	309	310	311	
	312	313	314	315	316	317	318	319	
	320	321	322	339	340	341	349	354	

## TV and Cable Box Trouble Shooting

**Important Note: If you think you missed the TV code or you intend to use the remote on a different brand TV:** **Reset** the remote back to the beginning of the code search: Press and hold the SETUP button down, then press and hold the CC button down at the same time until the red LED light blinks quickly 3 times, then release both buttons. You have now reset the code list back to the beginning. Then see Easy TV Setup on page 1.

### **Reset remote to work TV only without a cable box.**

If you've already set up the remote to work both a TV and a Cable Box and now wish to operate TV only without a cable box. Hold down the  button and SETUP button together until the remote blinks 3 times quickly and immediately release both buttons. Then follow the **Reset** instruction in the above paragraph.

# MULTI-BED TV INSTRUCTIONS

FOR HEALTHCARE TVs WITH THIS FUNCTION ONLY



**Before proceeding, please ensure that your TV has the Multi (bed)-Code feature and the TV has been set to the appropriate Multi-bed setting. You will need to refer to your TV's manual for the TV's Multi-bed setup instructions.**

The Multi-bed feature of your TV is not compatible with in-room cable set top box, DTA or Satellite System set top box

- 1) Press and Hold Down both the SETUP and ENTER buttons at the same time, until the LED light turns on and remains on.
- 2) Enter the three digit direct access number for your brand from the list below; the LED light will then turn off confirming it was accepted.

Test the remote to ensure proper operation; If everything is working you are done, if not please ensure your TV is also set to the correct Multi (bed)-Code and repeat Step 1 and 2 above.

SAMSUNG®		PHILIPS®		LG®	
Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.		Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.		Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.	
Stand Alone TV (0) No Multi-Code	241	Blue Stand Alone TV No Multi-Code	215 or 505	Stand Alone TV No Multi-Code	274
ID Code 1 (TV 1)	260	Red	269 or 502	Multi-Code 1 (Bed 1)	275
ID Code 2 (TV 2)	261	Green	270 or 503	Multi-Code 2 (Bed 2)	276
ID Code 3 (TV 3)	262	Yellow	271 or 504	Multi-Code 3 (Bed 3)	277
ID Code 4 (TV 4)	263			Multi-Code 4 (Bed 4)	278
ID Code 5 (TV 5)	264			Multi-Code 5 (Bed 5)	253
ID Code 6 (TV 1)	265			Multi-Code 6 (Bed 6)	254
ID Code 7 (TV 1)	266			Multi-Code 7 (Bed 7)	255
ID Code 8 (TV 8)	267			Multi-Code 8 (Bed 8)	256
ID Code 9 (TV 9)	268			Multi-Code 9 (Bed 9)	257
		RCA®			
		Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.			
		Stand Alone TV System/Bed 1	216 or 280 or 296 or 002		
		System/Bed 2	299 or 281 or 297		
		System/Bed 3	501 or 258 or 298		
		System/Bed 4	278 If Applicable		
				ZENITH® (Older CRT TVs)	
				Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.	
				Bed 2 or Stand Alone TV	272
				Bed 1	273
PDI®					
Refer to your TV's manual for the TV's Multi (bed)-Code setup instructions.					
038 or 042	040 or 044				

## Multi-bed TV Troubleshooting

**To reset remote back to original manufacturer settings:** Press and hold the SETUP button down, then press and hold the CC button down at the same time until the red LED light blinks quickly 3 times, then release both buttons. The unit TV codes are now reset.

If the remote is not operating properly, please ensure that your TV is in the correct Multi-bed setting. Refer to your TV's manual for the TV's Multi-bed setup instructions.

**PLEASE TURN INSTRUCTIONS OVER AND BEGIN AT PAGE 1**

ALCO Sales & Service Co.  
6851 High Grove Blvd  
Burr Ridge, IL 60527  
800-323-4282  
info@alcosales.com