
INSTALLATION INSTRUCTIONS


Upper Cover
x1



Tamper Proof Screws
x8




Screw Mount Plate
x1




*Tool Required (not included) screw driver with anti-tamper hexscrew driver bit

Rubber Gasket
x1

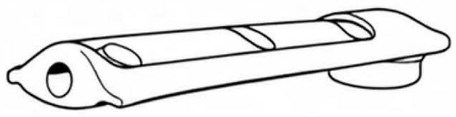

Looey® Splash Guard
x1

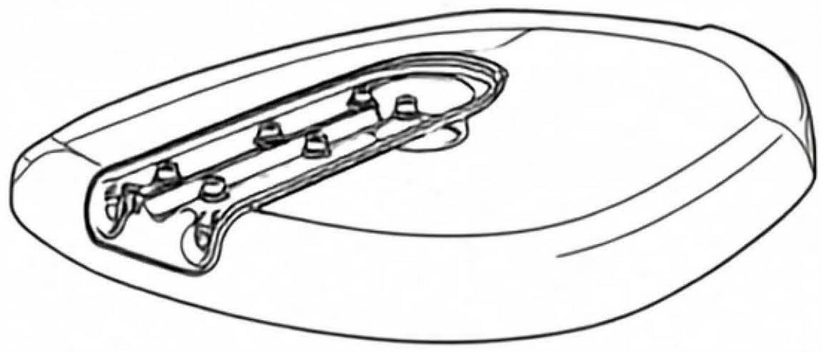

- Ensure the bedpan washing faucet is in good working order before installation.
- Ensure Looey® is compatible with the existing bedpan washing hardware.
- Remove all packaging from Looey®.
- Lower the bedpan washing diverter spray arm to the down position.
- Place the rubber gasket around the diverter spray arm faucet with the slit facing downward.
- Place the Looey® splash guard beneath the lowered diverter spray arm and rubber gasket. Apply gentle pressure to seat the faucet and gasket snugly into the channel in the splash guard.
- Place the screw mount over the gasket and insert the screws into the corresponding threads. Hand-tighten only. Do not overtighten.
- Slide the upper cover over the screw mount and secure it with the two screws using the corresponding threads. Hand-tighten only. Do not overtighten.
- Confirm that Looey® is securely attached before use.
- Looey® is now ready for use!