


Horseshoe Wedges help protect patients from injury by helping close the gaps around the headboard/footboard of the mattress and by cushioning the side rails and the headboard or footboard. They may also help deter the patient's release of restraints. Each Horseshoe Wedge attaches with hook and loop and quick-release straps and is made of durable, medium density foam and covered in soft, water repellent vinyl. Meets CA #117 Flame Retardancy Standards

Horseshoe Wedges comes with convenient zippers, allowing them to be joined together with optional Side Rail Wedges and Bed Bumpers for extended coverage around the perimeter of the bed.

REF AL-76970 Universal, 38"W x 15"L x 17"H(A) x 11"H(B)
(97 cm x 38 cm x 43 cm x 28 cm)

REF AL-76971 Fits Hill-Rom TotalCare, 38"W x 18"L x 11"H(A) x 5"H(B)
(97 cm x 46 cm x 28 cm x 13 cm)

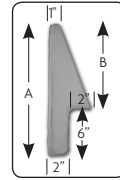

Dimensional profile



AL-76970



Horseshoe Wedge (AL-76970) joined with optional Side Rail Wedge

Monitoring

WARNING Horseshoe Wedges will not prevent a determined patient from exiting the bed, going over or attempting to go between or through side rail gaps. **ALWAYS** follow your facility's policies and procedures for patient assessment, monitoring and rehabilitation.

Application Instructions:

1. Inspect product prior to use. DO NOT use soiled or damaged products.
2. Lower the bed side rails.
3. Unfasten all hook-and-loop and quick-release buckles and unfold the Horseshoe Wedge.
4. Position the Horseshoe on the inside of the head/footboard so that the wedge fits snugly between the mattress and the side rail (Fig. 1).
5. Tuck the end "tuck flap" under the mattress.
6. Feed the bottom attachment straps around the bottom of the bed footboard and the top straps over the top of the board. Connect the quick-release buckles and pull the straps to tighten (Fig. 2).
7. Wrap one wing of the wedge around the mattress and tuck the side "tuck flap" under the mattress (Fig. 3).
8. Raise one of the side rails. Thread the attachment strap through the side rail and attach it back onto itself (Fig. 4).
9. Repeat on other side.
10. Check for proper fit. Modified beds may not be compatible with Posey Horseshoe Wedges.



Cleaning Instructions:

Wipe clean with soap and water or disinfectant.



Disposal

WARNING Properly dispose of the product per facility's policy for BIOHAZARDOUS materials.

Storage and Handling

This device is designed for use in normal indoor environments. This device may be stored in ambient warehouse temperatures at normal humidity levels. Avoid excess moisture or high humidity that may damage product materials.