

## HAND SANITIZING STATION AL-88529

No contact, No contamination!

### FEATURES

- Hand Sanitizer Station - simple & easy to use
- No contact with hands
- Heavy Duty Stand
- Compatible with hand sanitizer and hand sanitizer gel
- Rust proof durable powder coated aluminum with steel base
- Hand Sanitizer is easy to refill with any soap
- Optional - customize with logo, welcome message, or use instructions, additional cost applies

### TECHNICAL SPECS

- Stand  
Height: 4'  
Width: 8"
- Base:  
Weight- 14 lb  
Width- 15.75"
- Hand Sanitizer:  
Height- 10"  
Width- 4"
- Charger or Batteries:  
Charger- 6V, 1 Amp  
Batteries- 4 C Batteries



Fill with any soap!

## HAND SANITIZING STATION INSTALLATION AND USE



### STEP 1

Attach rod to base using a countersunk bolt and tighten with the Allen key




### STEP 2

Open the Hand Sanitizer with opening clip




### STEP 3

Remove Soap Dispenser

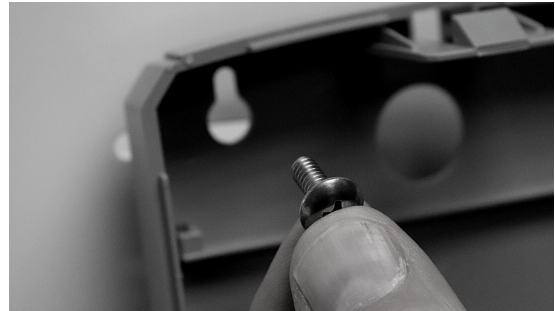

### STEP 4

Screw the back of Hand Sanitizer to the stand with a screwdriver

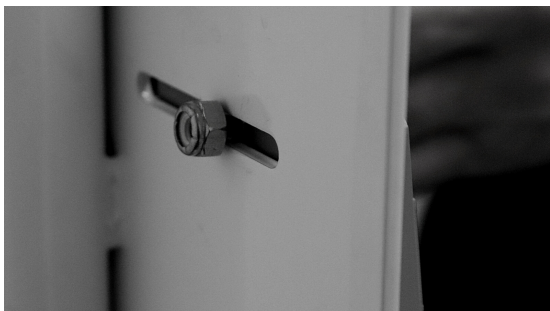

### STEP 5

Attach nut to the otherside of the stand



### STEP 6

Use adjustable wrench and screwdriver to tighten as needed



### STEP 7

Pour any kind of liquid/gel hand sanitizer into soap dispenser



### STEP 9

Shut lid of the hand sanitizer to complete installization.